

Water Technologies & Solutions

poseidon* PPM* dissolved air flotation units

industrial process water and wastewater treatment

The poseidon* PPM* DAF unit uses dissolved air flotation technology to separate fine dispersed particles from water. The unique design of the poseidon PPM unit provides for cost-effective water treatment and allows for the achievement of a high solids capture rate with maximum operational flexibility.

SUEZ's poseidon PPM units are modular, preassembled, rectangular-shaped units which are space-efficient and require small footprints and minimal field erection.

Different stainless steel grades, such as 304L, 316L, Duplex 2205 and other corrosion-resistant materials are used for construction to fit process needs.

ready for the resource revolution



feeding the unit

SUEZ's poseidon PPM unit can be fed by pumping or by gravity, with either a constant or variable flow. The unit tolerates variations in feed concentration, which allows for operational flexibility. A dual chemical system or a single chemical system may be required for optimum suspended solids removal. In a dual chemical system, a coagulant is mixed with the influent at the suction of the feed pump or at the inlet of a flocculator in order to coagulate the finely dispersed material. Downstream, in the manifold area, a polyelectrolyte is mixed into the stream, initiating floc formation. In a single chemical system, the flocculant is also mixed with the stream prior to the inlet compartment. If the feed flow rate varies, a proportional flow regulator for the chemical dosage pumps will allow for the right chemical addition rates.

proprietary recirculation system

The micro-bubbles required for flotation are produced with a recirculation system. This system, designed to operate on a continuous basis, meets the essential conditions for proper air dissolution and micro-bubble generation. It also ensures a high solids capture rate by allowing the combining of flocs and microscopic air bubbles, forming air-floc conglomerates.

The recirculation system is composed of a pneumatic box, a patented poseipump* recirculation pump (U.S. Patent 5.385.443) and a pressure release system. The efficiency of the recirculation system is mainly attributed to the poseipump, which ensures fine air dispersion into the recirculated water and builds a proper pressure to allow for air dissolution. The poseipump is fed from the clarified water outlet, the recirculation water ratio being about 10% to 15% of the total flow. The micro-bubbles are formed when the recirculated water is released to atmospheric pressure prior to entering the inlet compartment of the unit.

The poseidon air dissolving system generates very small air bubbles (30–40 μm) and ensures the combination of the micro-bubbles with the flocculated particles, increasing their buoyancy. The floatable air-floc conglomerates, along with the rest of the wastewater stream, enter into the flotation unit inlet compartment and then into the separation cell. The floatable material then rises to the surface, and any heavy settleable particles (sand, grit, etc.) settle into sludge cones at the bottom of the machine.

intermediate capture surface zone

The poseidon PPM unit is equipped with poseidon poseipack which constitutes an intermediate solids capture surface zone that maintains a low overflow rate and ensures a high capture rate. The poseipack also allows for low polymer consumption. Particles having different densities will rise and form the sludge/float layer at different rates.



benefits

- **HIGH PERFORMANCE AND OPERATIONAL FLEXIBILITY:**
 - + High capture rate
 - + High sludge / float consistency
 - + Easily handles upstream variations in flow rate and contaminant concentration
- **LOW OPERATING COSTS:**
 - + Efficient polymer consumption
 - + Minimal operator monitoring required
 - + Minimal maintenance required
 - + Stainless steel and complete corrosion-resistant construction
- **LOW INSTALLATION COSTS:**
 - + Modular preassembled units
 - + Space-efficient small footprint
 - + Minimal field erection time: unload, position and connect

Fast rising particles will rise in the upper part of the separation cell and smaller, slow rising particles, will be separated with the poseipack, located prior to the outlet of the flotation unit. The poseipack uses corrugations to favor the contact between smaller flocs and micro-bubbles, increasing their size and buoyancy, thus allowing them to rise to the sludge/float layer. The clarified water flows down the poseipack where it is collected into outlet pipes.

sludge/float removal system

SUEZ's poseidon PPM unit is equipped with a scraping system which allows for continuous proper removal of the sludge/float. This system includes a sludge/float scraper and one or more rotary thickeners each of which are equipped with a motor-reducer with variable speed adjustment capability. This provides for reliability and flexibility of the sludge/float consistency and removal.



water level adjustment

The unit is also operated with a level adjustment system by means of adjustable weirs or an automatic level control system. The poseidon PPM unit Model B is designed with adjustable weirs for level adjustment. The poseidon PPM unit Model E is operated with an automatic level control system consisting of a level control valve and a level transmitter. Both types of level adjustments allow for flexibility of sludge/float consistency and removal and, in addition, increase the stability of the treatment by maintaining a constant level in the unit.

sediment removal system

In order to avoid any build up of heavy solids at the bottom of the unit, sludge cones and automatic drain valves are installed. The sequence of drainage is set relative to the particular application requirements.



Preassembled, modular, space-saving design


Small installed footprint saves space and new building cost



poseidon PPM DAF unit

conventional rectangular DAF unit

poseidon PPM Model E unit shown

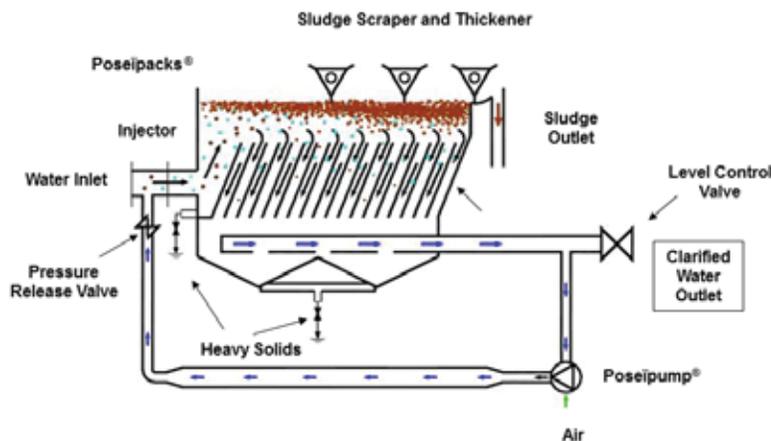

poseidon PPM

dissolved air flotation units



integrated treatment solutions

As a full treatment line specialist, SUEZ draws upon a broad portfolio of proven technologies to assist industries and municipalities in meeting their water and wastewater treatment challenges. We custom design integrated equipment solutions and offer a comprehensive set of chemicals, monitoring instruments, and digitally enabled services for a wide range of applications:

- industrial water and wastewater
- municipal drinking water
- municipal wastewater
- biosolids management

We also offer global expertise in the design, build, operation and maintenance of water treatment plants and systems, all delivered to your specific demands.

piloting

SUEZ offers pilot systems and services for this and many other of our product offerings. Pilot studies are a practical means of optimizing physical-chemical and biological process designs and offer the client several benefits, such as:

- proof of system reliability
- optimal design conditions for the full-scale system
- raw water lab analysis
- regulatory approval

If you are interested in a pilot system, please contact us.

contact Find a contact near you by visiting www.suezwatertechnologies.com and clicking on “**Contact Us.**”

*Trademark of SUEZ; may be registered in one or more countries.
©2018 SUEZ. All rights reserved.
BRclposeidon_DAF_PPM_EN Jun-18

